

Engine Undercover Removal and Installation


 
Removal/Installation

NOTE: [How to read the torque specifications.](#)

1. Engine Undercover - Remove

Fastener Locations

A ▶ : 4 B ▶ : 2 C ▶ : 19 D ▶ : 3

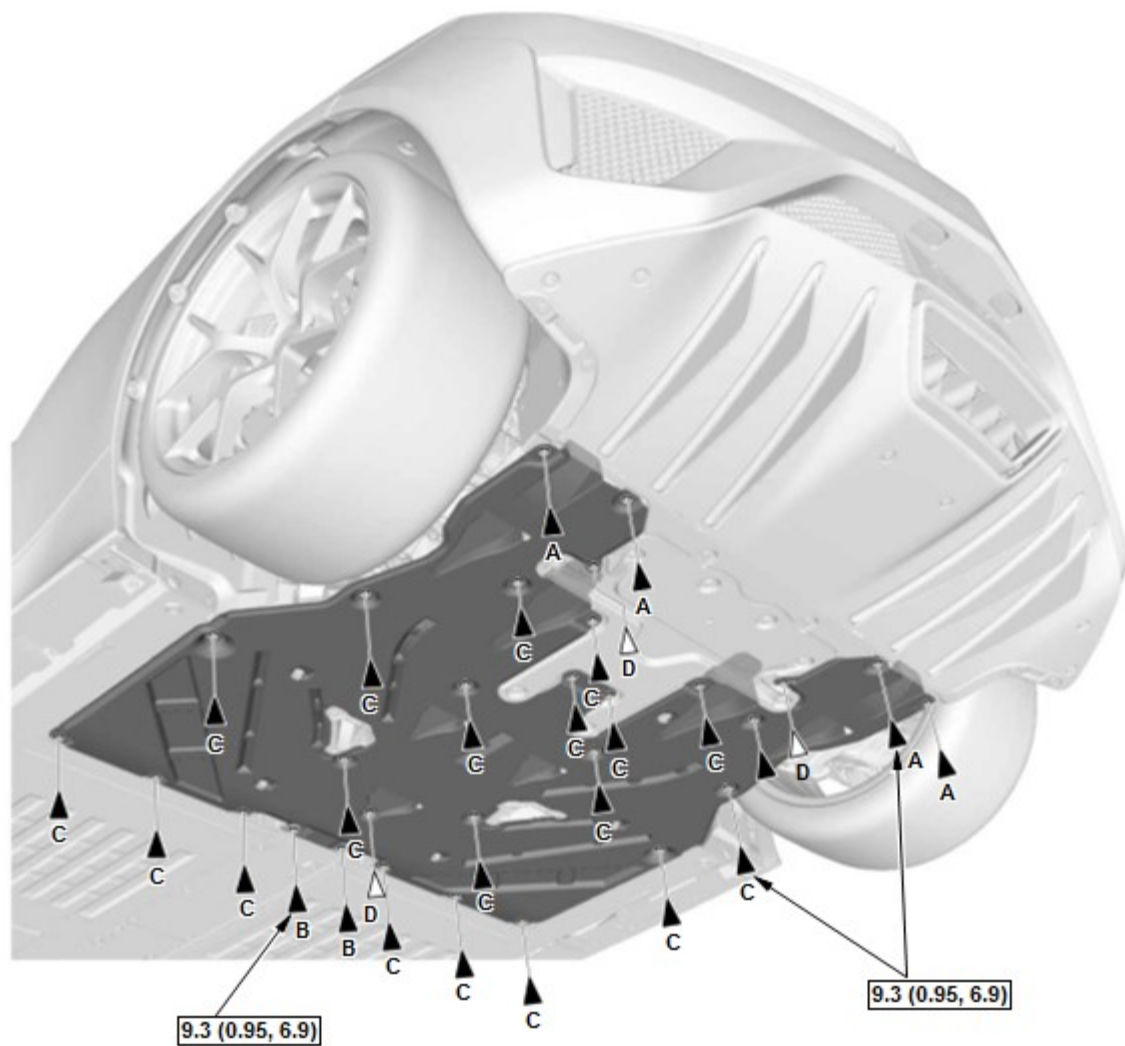

2. All Removed Parts - Install

1. Install the parts in the reverse order of removal.