

Engine Oil Replacement

Replacement

NOTE:


- [How to read the torque specifications.](#)
- Engine oil is poisonous. If ingested, get medical attention immediately.

1. Vehicle - Lift

2. Right Engine Compartment Cover - Remove (With Engine Compartment Cover)

3. Engine Under Cover - Remove

4. Engine Oil - Drain

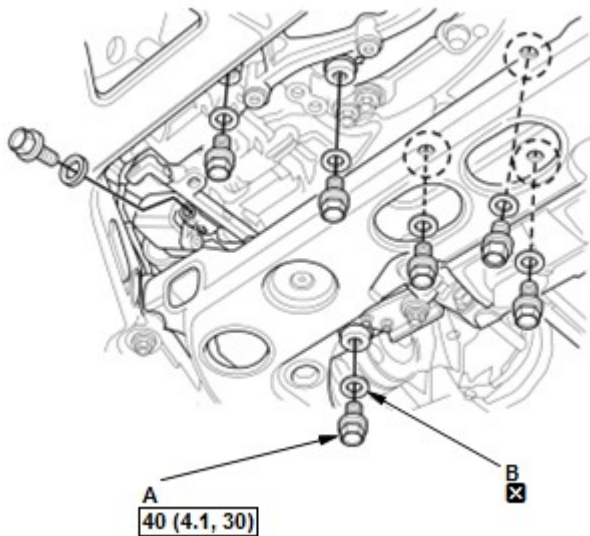


1. Remove the drain bolts (A), and drain the engine oil in sequence.

NOTE: There is no sequence to remove the sequence ② bolts.


2. Reinstall the drain bolts with new washers (B) and torque to specification.

NOTE: Do not overtighten.

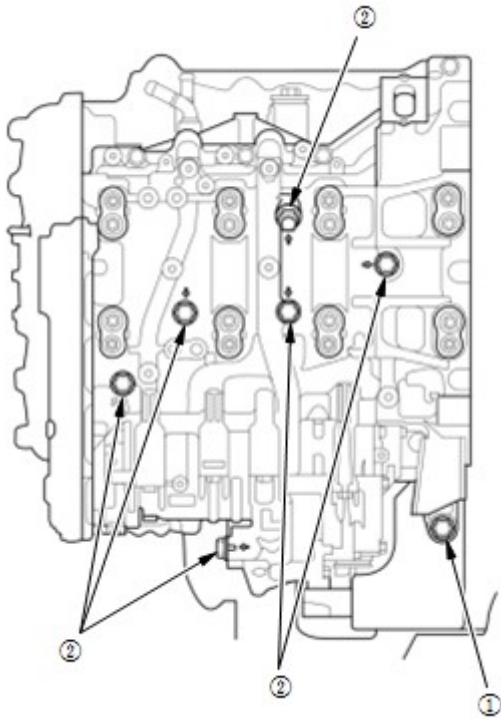

5. Engine Oil - Refill

1. [Refill the oil tank with the recommended engine oil](#) to 6.5 L (6.9 US qt).

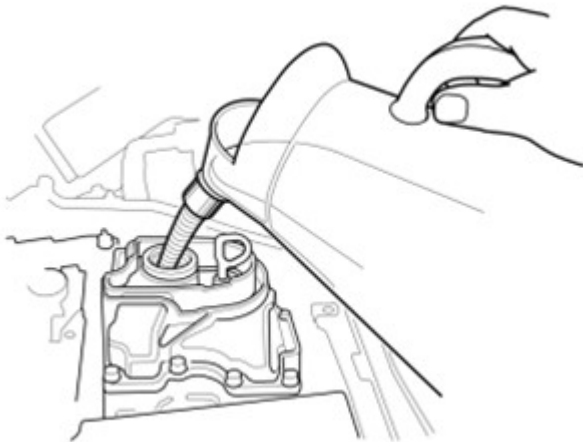

6. Engine Oil Level - Check

7. Engine Oil - Refill

1. Add engine oil to bring it to the upper mark.

Capacity**At Oil Change:** 7.3 L (7.7 US qt)**At Oil Change
including Filter:** 7.9 L (8.3 US qt)**After Engine
Overhaul:** 9.8 L (10.4 US qt)**8. Engine Oil Leak - Check****9. Engine Under Cover - Install****10. Maintenance Minder - Reset (With Maintenance Minder System)**

1. If the Maintenance Minder required to replace the engine oil, [reset the Maintenance Minder with the gauge](#) (see "Resetting the Maintenance Minder"). If the Maintenance Minder did not require to replace the engine oil, [reset the Maintenance Minder with the HDS](#) (see "Resetting the Individual Maintenance Items").

11. Engine Oil Monitor - Reset (With Engine Oil Monitor System)