



INSTALLATION INSTRUCTIONS

Accessory
**ILLUMINATED
DOOR SILL TRIMS**
P/N 08E12-T6N-200

Application
2017 NSX

Publications No.
VERSION 1
Issue Date
APR 2016

PARTS LIST


Left door sill trim




Right door sill trim




Left harness

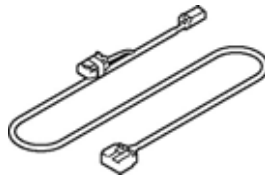

Right harness

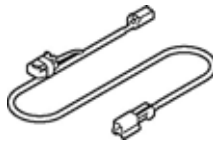

Aluminum tape

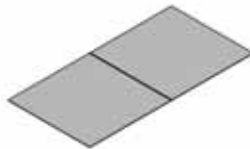

6 Wire ties



2 Fuse labels




TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- 10 mm Open end wrench
- Ratchet
- 10 mm Socket
- Utility knife
- Eye protection (face shield, safety goggles, etc.)
- Scissors
- Diagonal cutters
- Isopropyl alcohol
- Shop towel
- Drill
- 6 mm Drill bit
- Electrical tape
- File
- Cardboard
- Awl
- Felt-tip pen
- Tape
- Ruler

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Illuminated Door Sill Trim in the Vehicle

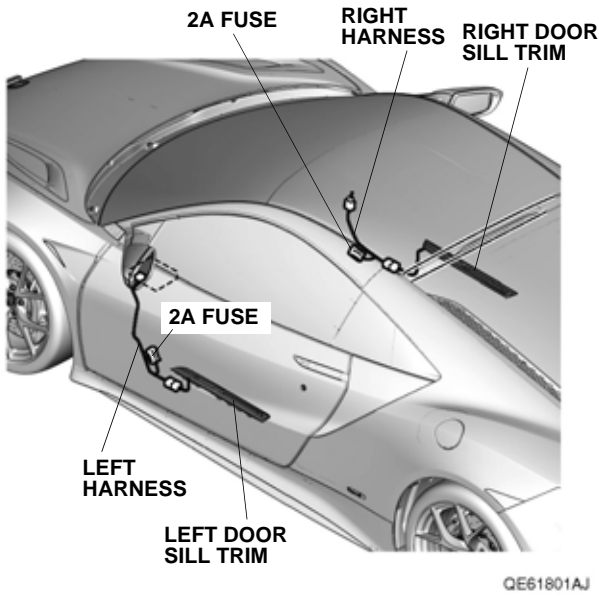


INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Disconnect the negative cable from the battery.


2. Pull away the door opening seal, and remove the left rear side trim.

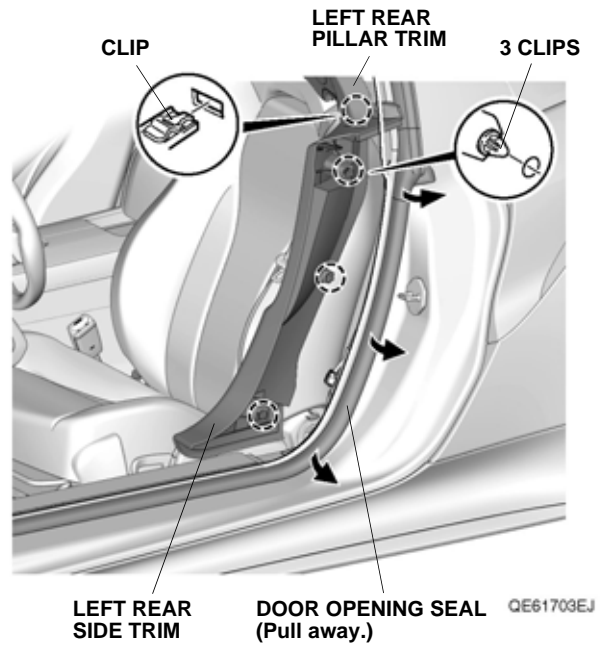


3. Pull away the door opening seal, and lift up the floor carpet to release the two clips.

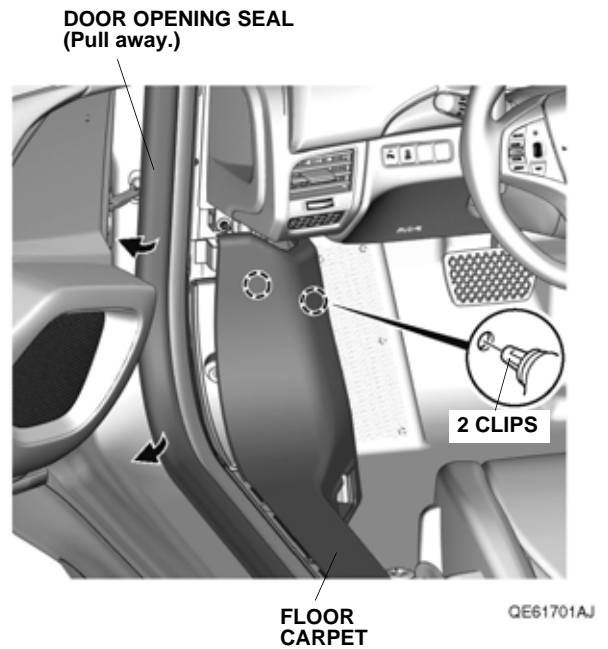


- Pull away the door opening seal. Using a plastic trim tool, lift up the floor carpet to release three clips.

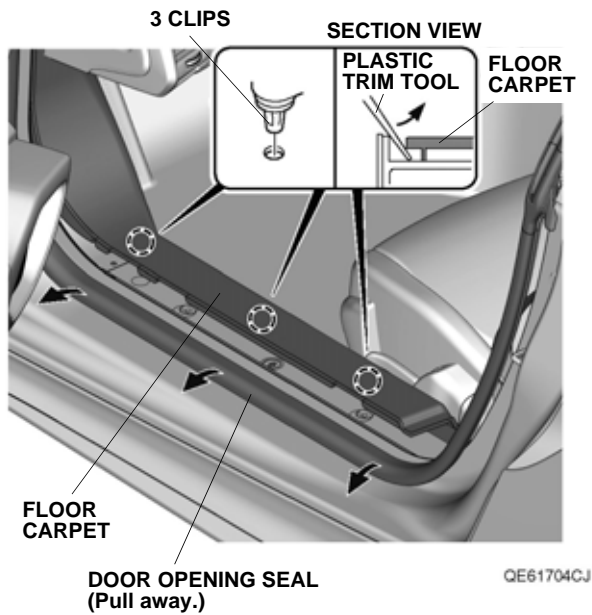

- Remove the left cowl side spacer.


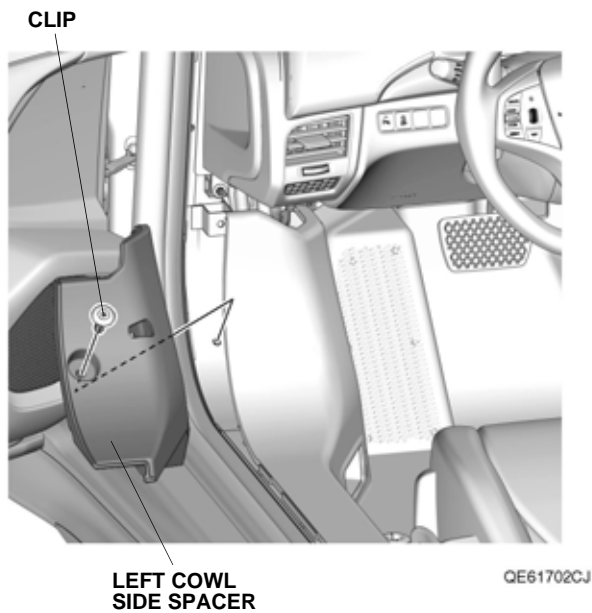


- Using diagonal cutters, cut out the extrusion as shown.
NOTE: To protect the seat, place a piece of cardboard between the floor carpet and the seat while cutting.

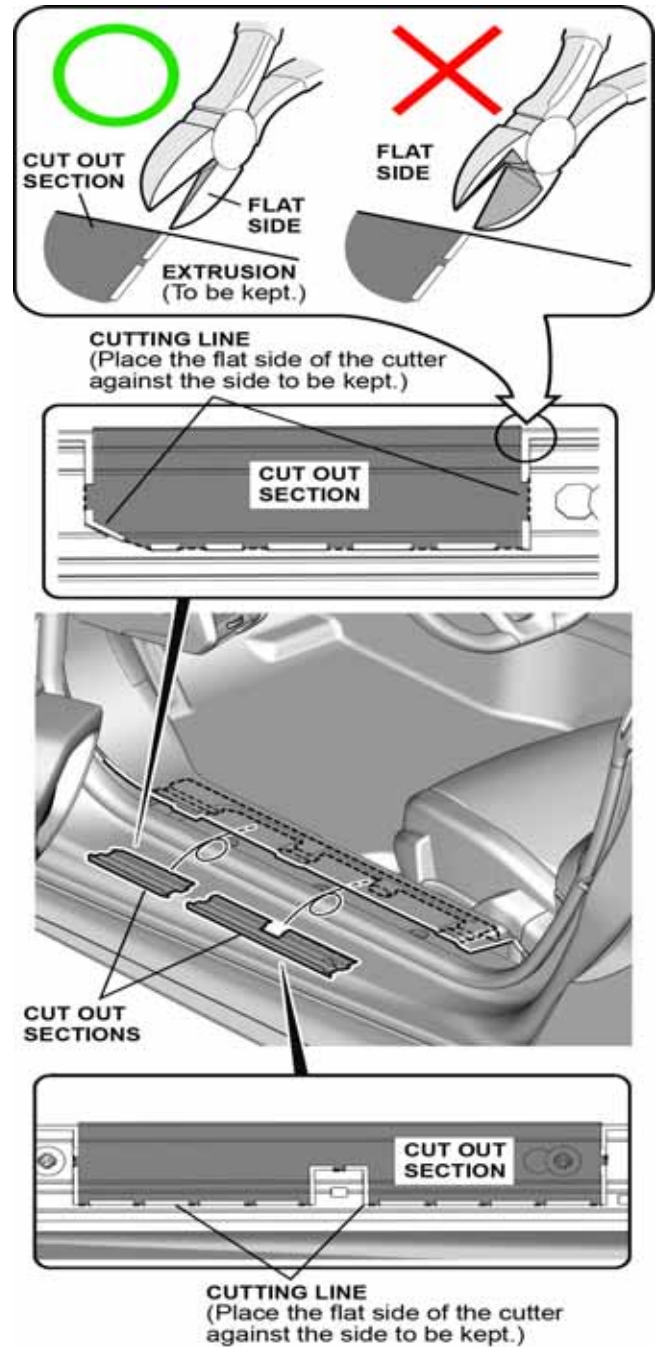

- Using a file, remove any burrs.



8. Using a utility knife, cut out the floor carpet as shown. NOTE: To protect the seat, place a piece of cardboard between the floor carpet and the seat while cutting.

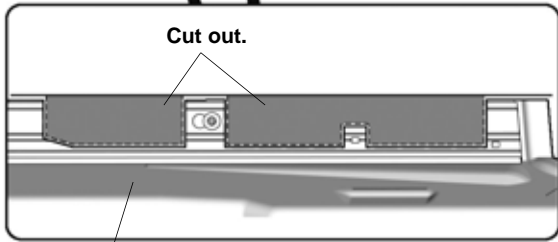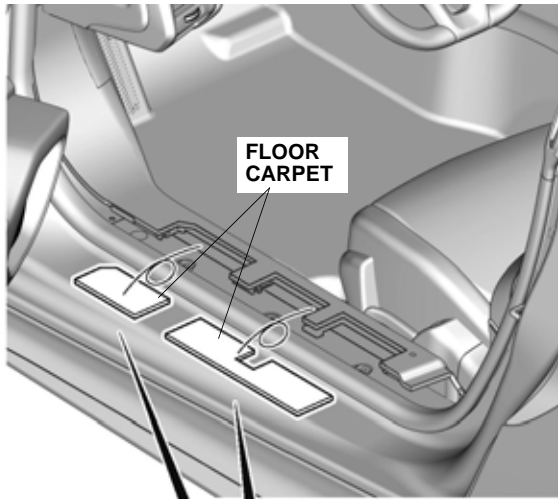

FLOOR CARPET
(inside)


QE61803CJ

9. Using a utility knife, cut out the floor carpet as shown. Be careful not to cut out the extrusion. NOTE: To protect the seat, place a piece of cardboard between the floor carpet and the seat while cutting.

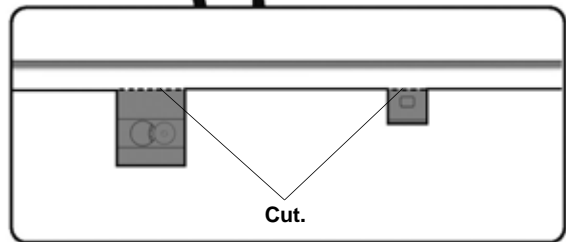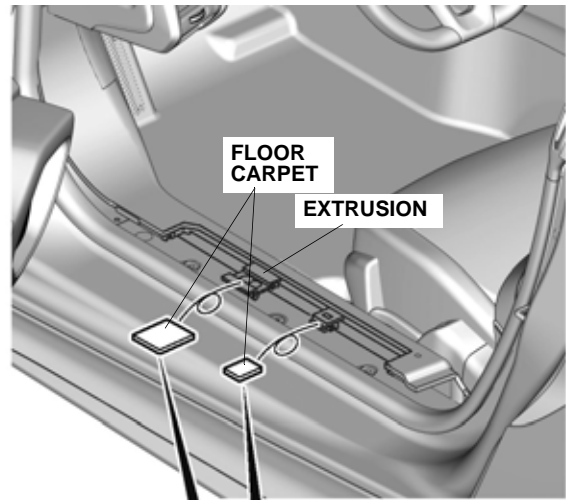


QE61813AJ


10. Locate the slot on the extrusion. Using an awl, pierce the floor carpet at the center of the slot.
NOTE: To protect the seat, place a piece of cardboard between the floor carpet and the seat while piercing.

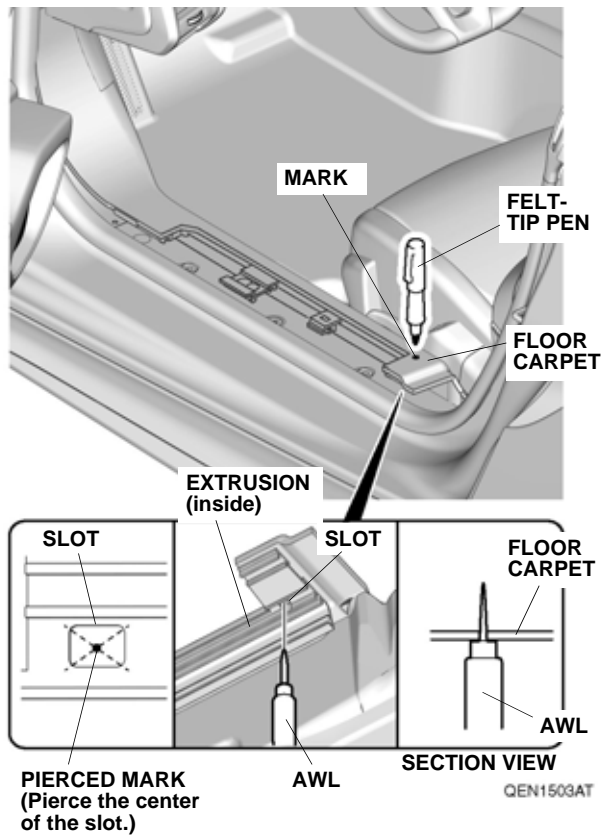

11. Using a felt-tip pen, mark the floor carpet at the pierced mark.
12. While wearing eye protection, drill a hole in the floor carpet with a 6 mm drill bit.
NOTE: To protect the seat, place a piece of cardboard between the floor carpet and the seat while drilling.

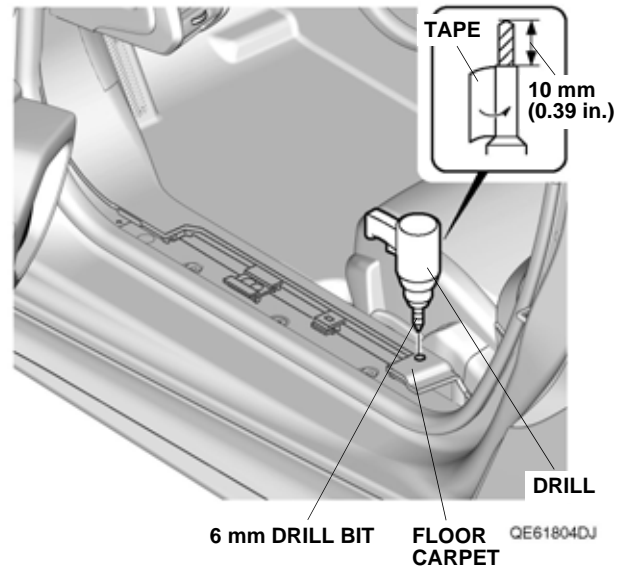


13. Repeat steps 2 through 12 on the right side of the vehicle.
14. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the fuse labels will attach.

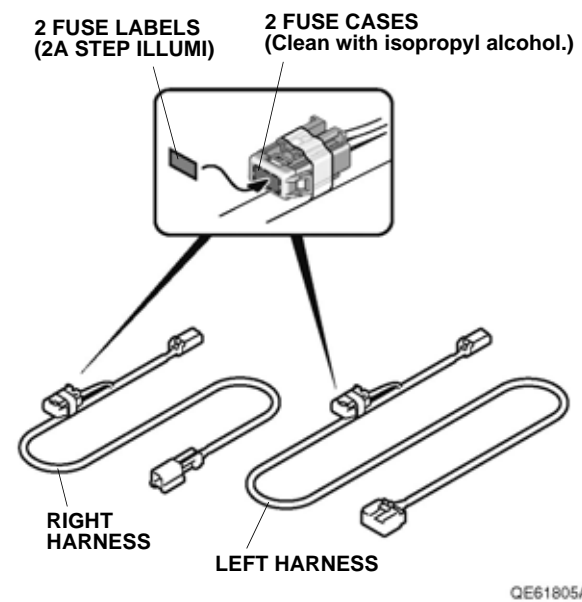


15. Attach each fuse label to the left and right harness fuse cases.


16. Plug the left harness 8-pin connector into the fuse box.

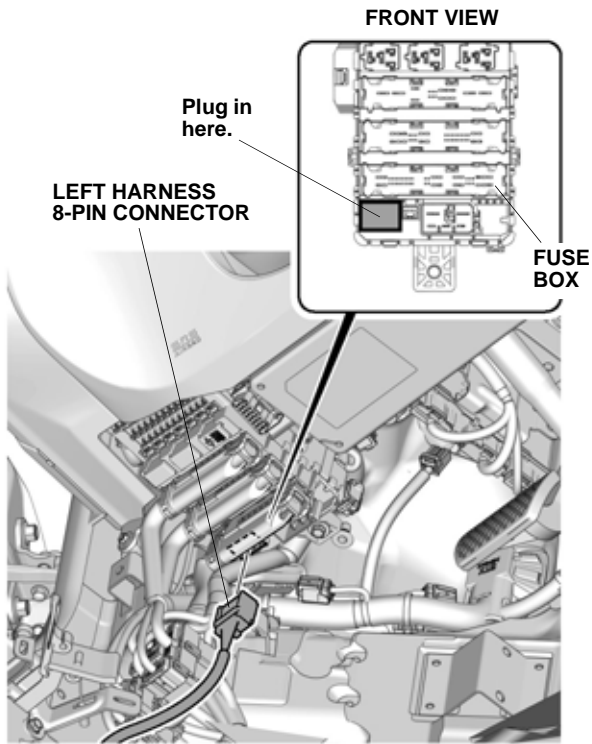

17. Secure the left harness to the vehicle harness with three wire ties.

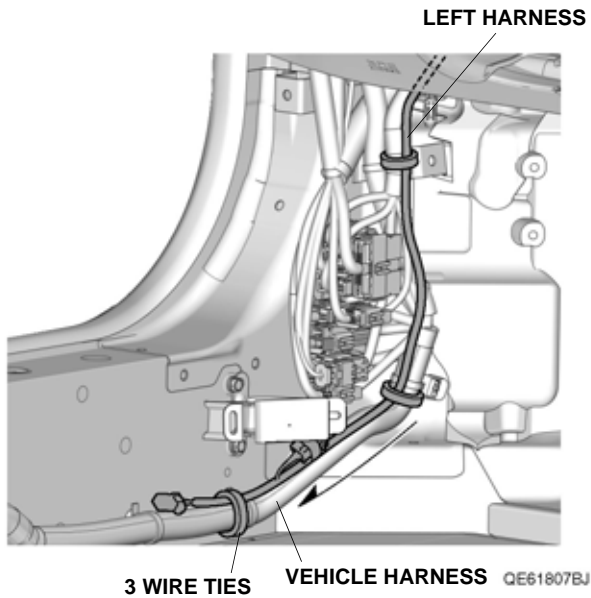


18. Remove the tape from the vehicle 2-pin connectors.

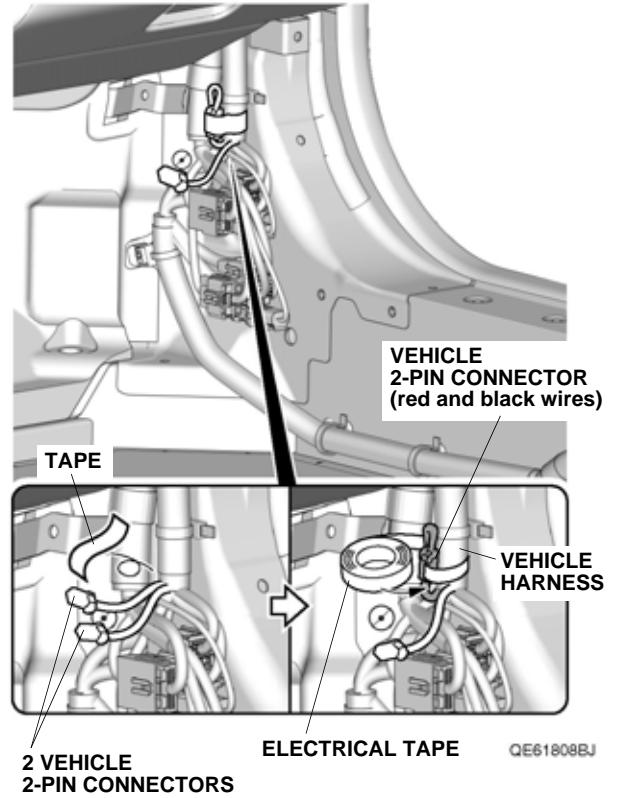


19. Secure the vehicle 2-pin connector to the vehicle harness with electrical tape.

20. Plug the vehicle 2-pin connector into the right harness 2-pin connector.

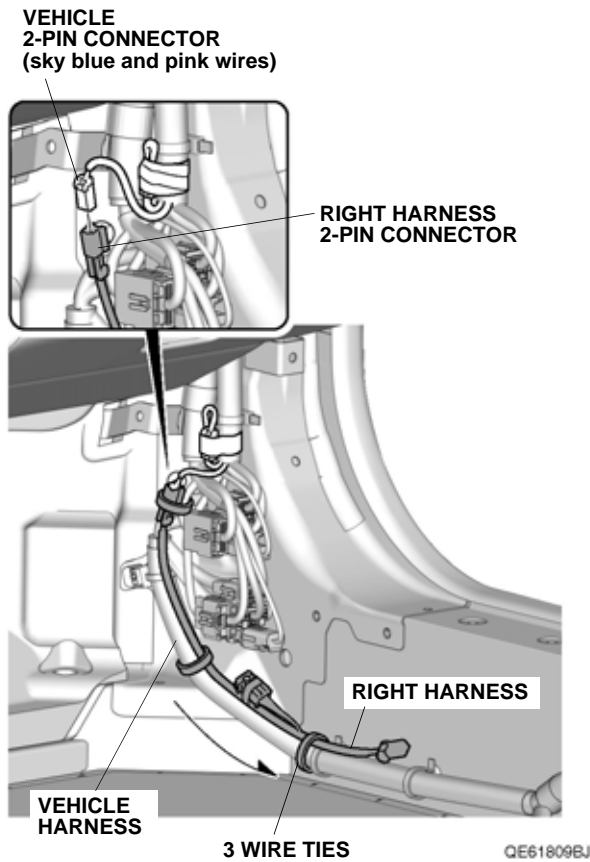


21. Secure the right harness and 2-pin connectors to the vehicle harness with three wire ties.

22. Install the left cowl side spacer.

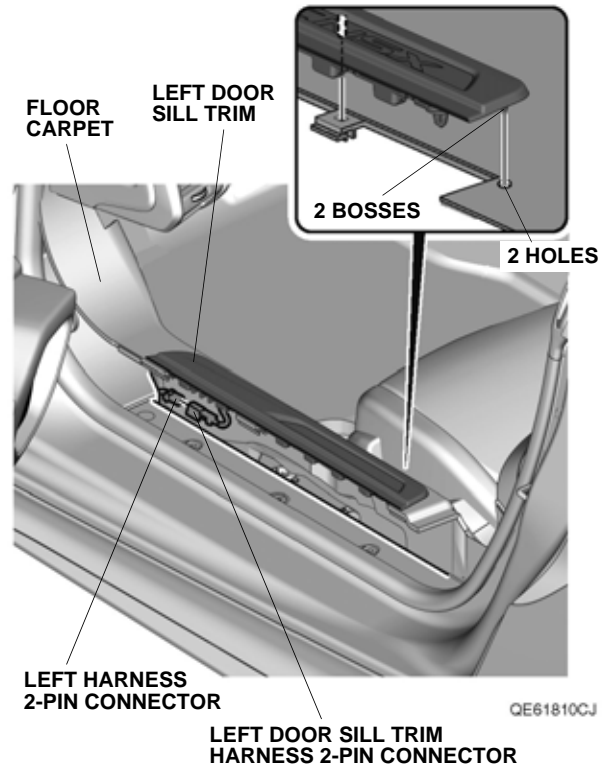


23. Plug the left harness 2-pin connector into the left door sill trim harness 2-pin connector, and position the left door sill trim on the floor carpet.

24. Using isopropyl alcohol on a shop towel, thoroughly clean the extrusion where the aluminum tape will attach.

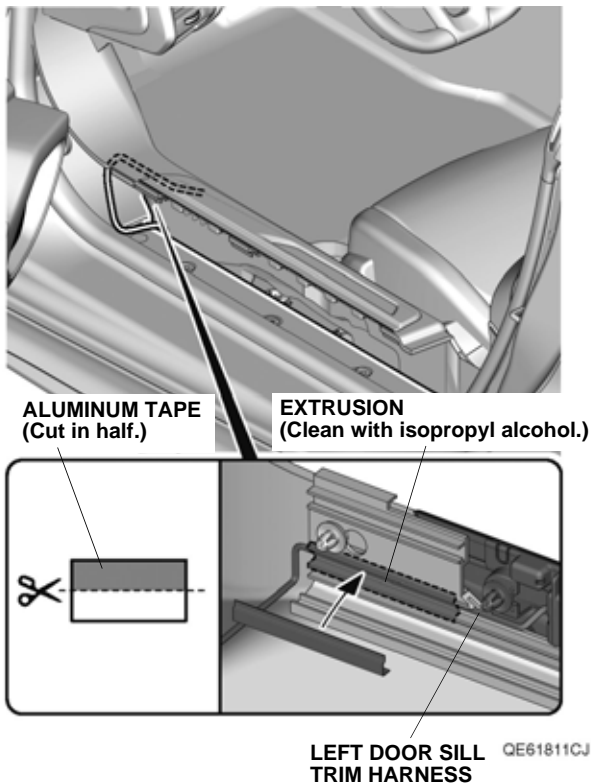

25. Using scissors, cut one aluminum tape in half. Secure the left door sill trim harness to the extrusion with one piece of aluminum tape.

26. Install the left door sill trim to the vehicle panel and install the floor carpet.

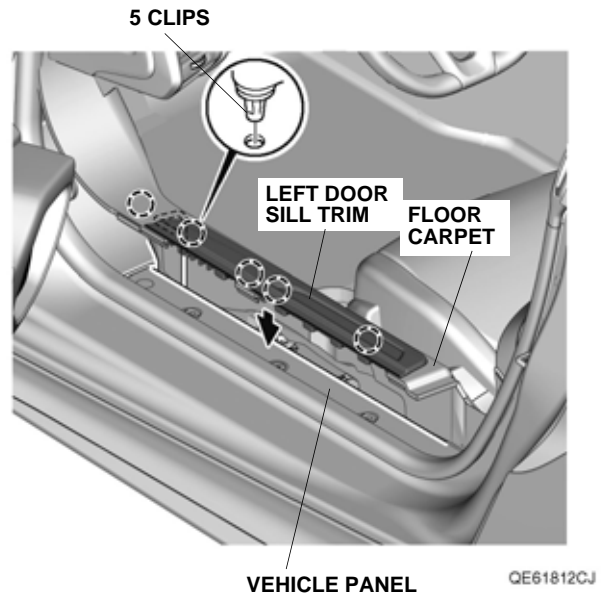

27. Repeat steps 22 through 26 on the right side of the vehicle.
28. Check that all wire harnesses are routed properly and all connectors are plugged in.
29. Install all removed parts.
30. Connect the negative cable to the battery.
31. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
32. Set the clock.
33. If necessary, restore the systems back to normal operation as described in the service information.

Check the Operation of the Illuminated Door Sill Trims

34. Make sure the light comes on when you open each door.